


# ARM22 - WETROOM SCREEN SUPPORT ARM


1

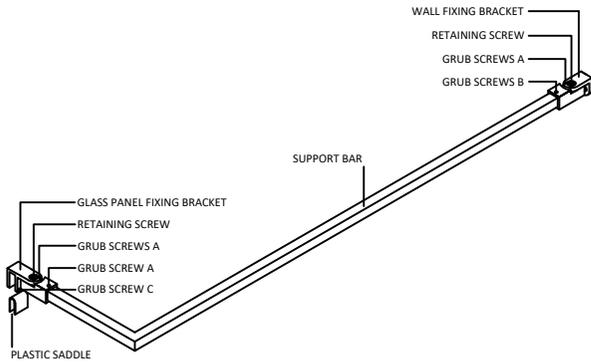

THE UNIVERSAL ARM CAN BE USED IN DIFFERENT POSITIONS BY REMOVING THE END FIXING BRACKETS AND CROPPING TO SIZE.

SELECT THE POSITION WHERE THE ARM IS TO BE INSTALLED, REMOVE THE END BRACKET BY UNDOING THE GRUB SCREW "B" AND TRIM TO LENGTH AS REQUIRED.


2

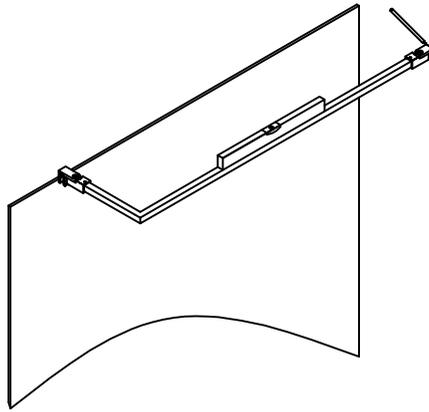

PLACE THE PLASTIC SADDLE IN THE GLASS PANEL FIXING BRACKET AND PLACE INTO POSITION ONTO THE PANEL AS SHOWN.

USE A SPIRIT LEVEL TO ENSURE EVERYTHING IS PLUMB. THEN MARK THE POSITION OF THE WALL FIXING BRACKET.

3

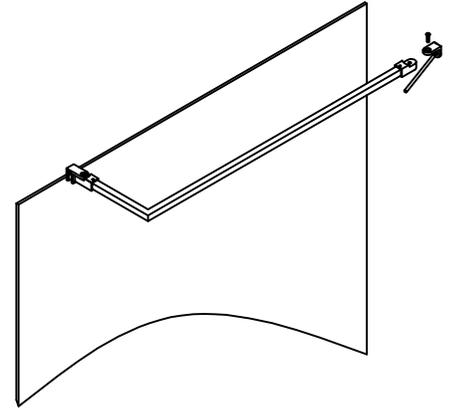


REMOVE THE END OF THE FIXING BRACKET BY UNDOING THE RETAINING SCREW.

PLACE THE END BRACKET INTO PREVIOUSLY MARKED POSITION. USING THE END BRACKET AS A GUIDE MARK THE POSITION OF THE HOLE FOR FIXING THE BRACKET.

DRILL THE HOLE FOR THE WALL PLUG.

FIX THE END BRACKET TO THE WALL AND RE-CONNECT THE BRACKET USING THE RETAINING SCREW.

4

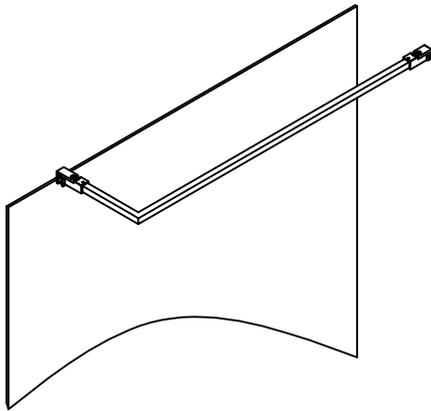

WHEN THE BRACKET IS IN POSITION RE-TIGHTEN ALL FIXING POINTS

ILLUSTRATION SHOWS THE ARM IN A PARALLEL POSITION

5

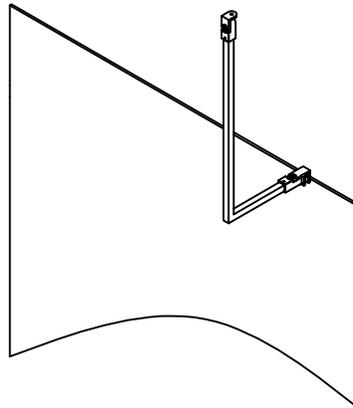


ILLUSTRATION SHOWS THE ARM IN A PANEL TO CEILING POSITION

6

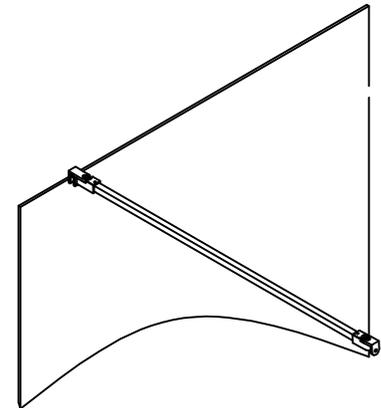


ILLUSTRATION SHOWS THE ARM IN A STRAIGHT PANEL TO WALL POSITION