


FIXED BATH SCREEN

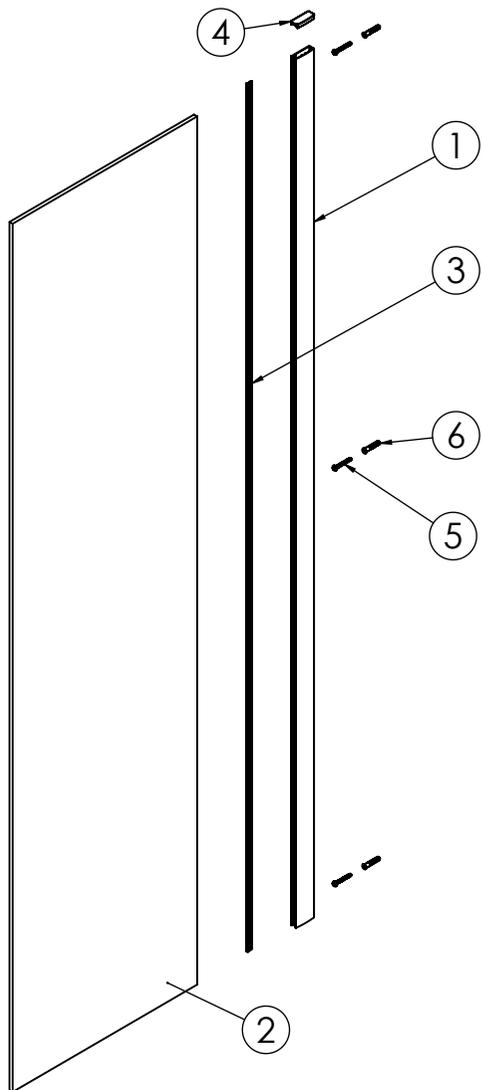

UNPACK THE BOX AND ENSURE ALL COMPONENTS ARE PRESENT.

NO REFUNDS OR REFITTING COST WILL BE GIVEN IF INCOMPLETE OR DAMAGED GOODS ARE FITTED.

THE TOUGHENED SAFETY GLASS SHOULD BE HANDLED WITH CARE AS IMPACTS WILL DAMAGE THE GLASS OR SCREEN.

FIT THE BATH AS PER THE MANUFACTURER'S INSTRUCTIONS.

TOOLS REQUIRED:


POWER DRILL - 6mm MASONRY DRILL BIT - CROSS HEAD SCREW DRIVER - TAPE MEASURE - PENCIL - SILICONE GUN WITH SANITARY GRADE SEALANT - SPIRIT LEVEL.

AFTERCARE: ENSURE YOU CLEAN YOUR PRODUCT USING A MILD DETERGENT DILUTED IN WATER, REMOVING ANY RESIDUE WITH A SOFT DAMP CLOTH.


MAINTENANCE: THE SCREEN MUST BE FREE FROM ANY DEBRIS OR SOAP BUILD UP.

ITEM NO.	PART NUMBER	Notes	QTY
1	WALL PROFILE		1
2	FIXED GLASS PANEL		1
3	WEDGE SEAL		1
4	WALL PROFILE TOP CAP		1
5	3.9mm x 30 PAN HD SELF TAPPER ST.STL	FOR FIXING TO WALL	3
6	WALL PLUG		3

1

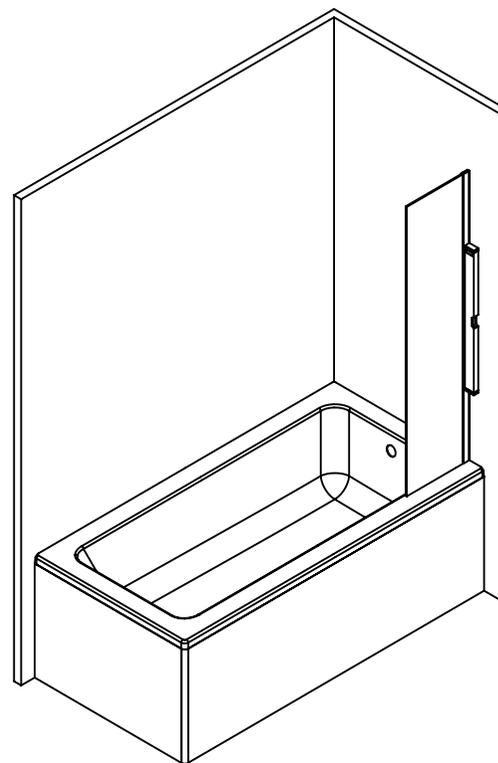

POSITION SCREEN TOWARDS INSIDE EDGE OF THE BATH TOP.

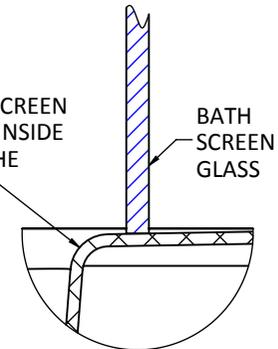


INSERT THE GLASS PANEL INTO THE WALL PROFILE (TAKE CARE AS THE GLASS IS NOT FIXED AT THIS POINT).

PLACE THE BATH SCREEN ONTO YOUR BATH ENSURING THAT THE SCREEN IS TO THE INSIDE OF THE BATH LEDGE AS SHOWN IN THE DETAILED VIEW ABOVE. USE A SPIRIT LEVEL TO ENSURE WALL PROFILE IS TRUE.

ENSURE THE CURVED FACE OF THE WALL PROFILE IS TO THE OUTSIDE OF YOUR BATH.

MARK THE POSITION OF YOUR WALL PROFILE WITH A PENCIL AND REMOVE.

2

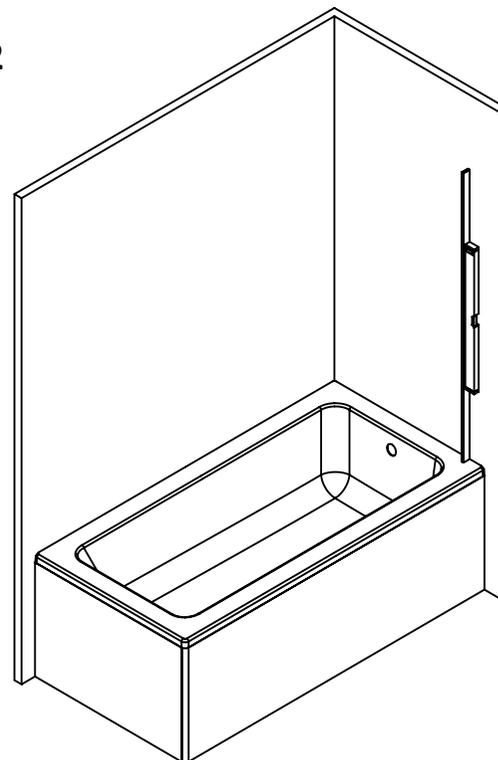

REMOVE THE FIXED GLASS PANEL.

REALIGN THE WALL PROFILE WHERE MARKED.

USE A SPIRIT LEVEL TO ENSURE TRUE AND SQUARE.

MARK THROUGH THE FIXING HOLES WITH A PENCIL. REMOVE PROFILE, DRILL AND PLUG THE WALL (ITEM 6).


FIX THE WALL PROFILE IN PLACE USING SUITABLE FIXING FOR THE WALL. THE SUPPLIED FIXINGS MAY NEED TO BE SUBSTITUTED.

3

ONCE YOUR WALL PROFILE HAS BEEN FIXED, REPLACE THE GLASS PANEL AND MAKE SURE THE BOTTOM FACE OF THE GLASS IS SITTING FLUSH ON THE BATH TOP FACE.


ENSURE WEDGE SEAL IS TO THE INSIDE OF YOUR BATH.

PUSH THE WEDGE SEAL BETWEEN THE GLASS AND THE INSIDE LIP OF THE WALL PROFILE. START AT THE BOTTOM. YOU MAY USE A SMALL BLOCK OF WOOD TO ASSIST FITTING THE SEAL.

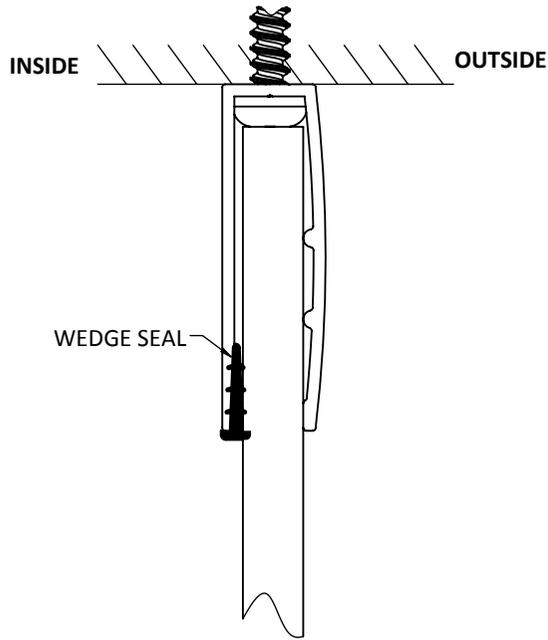


4

FIT SCREEN TOP CAP.

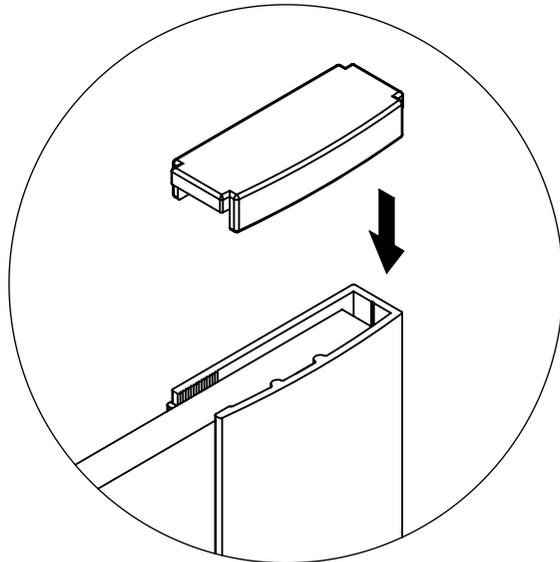


5

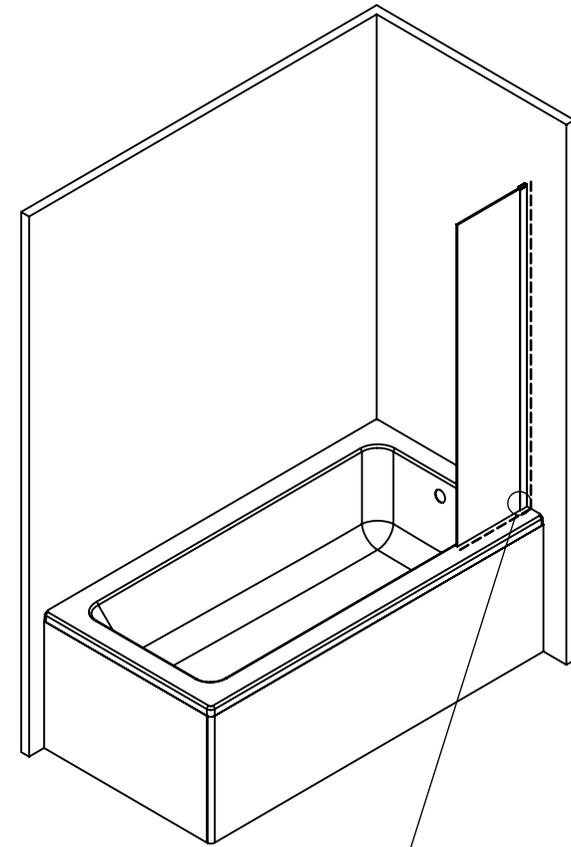

SMALL AS BEAD AS POSSIBLE (FULL LENGTH).

FULL BEAD.

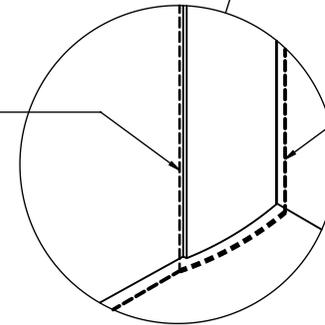

EXTERNALLY SILICONE SEAL THE WALL PROFILE WHERE IT MEETS THE WALL AND ALONG THE BOTTOM WHERE IT MEETS THE BATH. ALL IN A CONTINUOUS FULL BEAD.

ALSO SILICONE SEAL WHERE THE FIXED GLASS PANEL AND THE WALL PROFILE MEET, WITH AS SMALL A BEAD AS POSSIBLE. SEE DETAILED VIEW ABOVE.

DO NOT SILICONE SEAL INSIDE THE SCREEN.

ALLOW 24 HOURS TO FULLY CURE.