


CORNER MIRROR CABINET - INSTALLATION INSTRUCTION

(2 PERSON INSTALLATION IS RECOMMENDED)

1. MARK THE FIXING POSITIONS AS INDICATED ON THE REVERSE OF THE CABINET AND DRILL THROUGH THE BACK PANEL WITH A 5mm DRILL BIT. IT IS RECOMMENDED THAT YOU USE A WOODEN BLOCK ON THE INSIDE TO PREVENT SPLITTING.

2. POSITION THE MIRROR CABINET ON THE WALL IN THE DESIRED POSITION, MAKING SURE THAT THE MIRROR IS LEVEL.

3. LIGHTLY MARK THE WALL THROUGH THE HOLES WITH THE DRILL BIT. ENSURE THAT THE CABINET IS FITTED USING FIXINGS SUITABLE FOR YOUR WALL TYPE (NOT SUPPLIED).

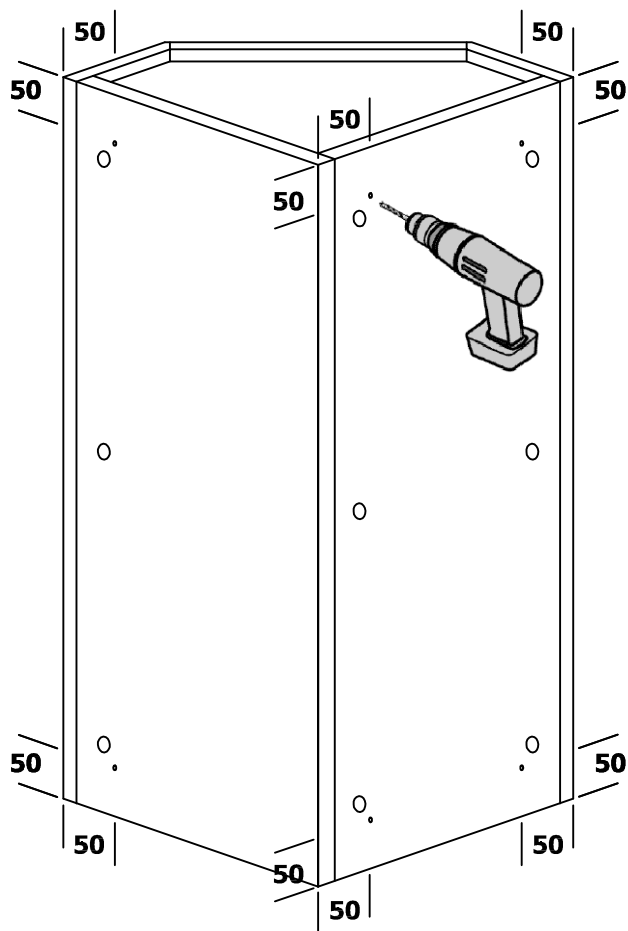

CORNER MIRROR CABINET - INSTALLATION INSTRUCTION

(2 PERSON INSTALLATION IS RECOMMENDED)

1. MARK THE FIXING POSITIONS AS INDICATED ON THE REVERSE OF THE CABINET AND DRILL THROUGH THE BACK PANEL WITH A 5mm DRILL BIT. IT IS RECOMMENDED THAT YOU USE A WOODEN BLOCK ON THE INSIDE TO PREVENT SPLITTING.

2. POSITION THE MIRROR CABINET ON THE WALL IN THE DESIRED POSITION, MAKING SURE THAT THE MIRROR IS LEVEL.

3. LIGHTLY MARK THE WALL THROUGH THE HOLES WITH THE DRILL BIT. ENSURE THAT THE CABINET IS FITTED USING FIXINGS SUITABLE FOR YOUR WALL TYPE (NOT SUPPLIED).